

USER'S MANUAL

Watches with multifunction movement ISA SWISS 9516

www.vostok-europe.com

Functions 03
 Main 04
 Synchronizing the hands 05
 Time setting 06
 Alarm mode 07
 Time 2 mode 08
 Chrono mode 09
 Date mode 10

Analogical display:

- Hours and minutes synchronized with the digital display.
- Seconds indication on subdial.

Digital display:

- Chrono 100 hours (1/100 sec. the 1st. hour).
- 2nd time zone indication
- Day / Date indication
- 100-years perpetual calendar.
- Sound alarm.
- End of battery life signal.
- Visual clearing of the display in setup mode.
- 12 / 24 hour mode.
- Display illumination by **crown up or down**.

Caution: TURN THE CROWN SLIGHTLY BUT DON'T ROTATE IT !
 Fast rotation can cause damage of the movement!

Push the crown
to change Mode

Neutral
 ↓
 Alarm mode (Page 07)
 ↓
 Time 2 mode (Page 08)
 ↓
 Chrono mode (Page 09)
 ↓
 Date mode (Page 10)

From each mode, **push the crown for at least 3 seconds**. Movement is going into synch mode for adjust and synchronize the hands position.

Push A - Small second hand runs
 Slowly **turn the crown**
 Up or Down - Minute hand runs

Push the crown to exit.

Caution: TURN THE CROWN SLIGHTLY BUT DON'T ROTATE IT !
 Fast rotation can cause damage of the movement!

From each mode, **pull the crown**. Movement is going into time setting mode. The small second hand stops.

Slowly **turn the crown**
up or down to set hour.
The display will follow hands

Push A
changes between 12h/24h mode

Caution: TURN THE CROWN SLIGHTLY BUT DON'T ROTATE IT !
 Fast rotation can cause damage of the movement!

- To change Alarm status **push A**.
- To adjust Alarm **push B for at least 1 second**.

To adjust hours **push A**

Push B changes
between hours/minutes mode

To adjust minutes **push A**

- To exit of setting mode quickly, **push the crown**, or wait for 5 seconds.

- To adjust Time 2 **push B for at least 1 second**.

To adjust hours **push A**

Push B changes
between hours/minutes mode

To adjust minutes **push A**
(step 30 minutes)

- To exit of setting mode quickly, **push the crown**, or wait for 5 seconds.

- To start/stop the chrono **push A**. Display shows the elapsed time.
- To reset the chrono **push B** when chrono stopped.
- To read a partial time in chrono run mode **push B** to freeze/thaw the display.
- To stop chrono in frozen mode **push A**. Then **push B** to defreeze the display. Display gives the time elapsed at the moment of chrono stop.



- To adjust Date **push B for at least 1 second**.

To adjust years **push A**

Push B changes to
Mons adjust mode.
To adjust monts **push A**

Push B changes to
Days adjust mode.
To adjust days **push A**

- To exit of setting mode quickly, **push the crown**, or wait for 5 seconds.

When battery is low, all functions will be disabled, small second hand will stop.

If Alarm was ON it will not be disabled until ring.

