


Features 03
 Main 04
 Initial settings 05
 Alarm function 10
 World time function 12
 Battery 14

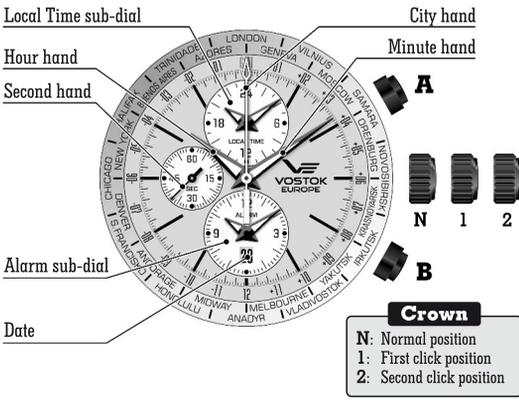


- **First time zone indication** by central hour and minute hands and by second hand at the sub-dial.
- **Date indication** in calendar window.
- **World Timer**
 Indication of time in any time zone at the Local Time sub-dial in 24-hour format.
 The World Timer indicates time in the city pointed by city hand on the inner ring.
- **The Alarm Time**
 The sound alarm can be set once at a designated time within next 12 hours.
- **Battery Life Indicator.**

1. SET TIME AND DATE

- Pull out the crown to the **1st** click position.
- Turn the crown clockwise until the previous day's date appears in the date window.
Note: Do not set the date between 9:00 PM and 1:00 AM. Otherwise, the date may not change properly.
- Pull out the crown to the **2nd** click position when the small second hand is at the 60 seconds position.
Note: If the crown is pulled out to the **2nd** click position while the Alarm is set, the Alarm hands will turn to indicate the current time.
- Turn the crown clockwise to move the hour and minute hands till the date will be changed to the current date. Continue turning the crown and set the time few minutes ahead. Be sure that the time is set in AM/PM correctly.
- Push the crown back to **N** position when current time will be the same as on the dial.


2. SET ALARM HANDS

- Pull out the crown to the **2nd** click position.
- Press the button **B** repeatedly to set the Alarm hands to the same time as indicated by the main hour and minute hands. The Alarm hands move quickly if the button **B** is kept pressed.

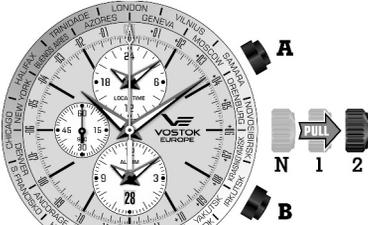

3. SETTING THE CITY HAND

- (crown remains in the 2nd click position)
- To enter to the City hand adjustment mode, press button **A** for 2 seconds. The City hand turns a full round.
 - To set the City hand to the desired city for which you know the current time, press the button **B** and move the hand to the necessary position. The City hand moves quickly if the button **B** is kept pressed.

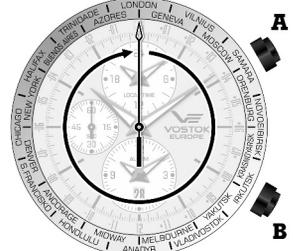

Recommendation:
 We recommend to set the City hand to the city that belongs to the same time zone as your home city (local time).

4. LOCAL TIME HANDS SETTING

- (crown remains in the 2nd click position)
- To enter to the Local Time hands adjustment mode press the button **A** for 2 seconds. The Local Time hour and minute hands turn a full round.
 - Press the button **B** to set the Local Time hands to indicate the time in the city you selected in the **step 3**. The Local Time hands move quickly if the button **B** is kept pressed. The Local Time hour hand makes one full rotation every 24 hours.
 - Push the crown back to the normal position.



The Alarm hands, City hand and Local Time hands can be adjusted in the below order when the button **A** is pressed for 2 seconds.



HOW TO SET THE ALARM

- Before using the Alarm, ensure that the Alarm hands are adjusted to indicate the current time. If the Alarm hands are not adjusted to the current time, follow the procedure in "Initial settings".
- The Alarm can be set to ring only once at a designated time within the next 12 hours.
 - The Alarm time can be set in one-minute increments.
 - Pull out the crown to the **1st** click position.
 - Press the button **B** repeatedly to set the Alarm hands to the desired alarm time. The Alarm hands move quickly if the button **B** is kept pressed.

When the Alarm hands pass over the current time while you keep the button **B** pressed, they will stop moving and the Alarm will be disengaged. In that case, release the button **B** and then again press and hold the button to set the Alarm hands to the desired time.

- Push the crown back to the normal position. The Alarm is automatically engaged.
- While the crown is at the normal position, the Alarm hands indicate the current time when the Alarm is disengaged, and the designated alarm time when the Alarm is engaged.

HOW TO PREVIEW THE ALARM SOUND

- Pull the crown out to the 1st click position.
- Press and hold the button **A** for longer than 2 seconds. The Alarm sound can be heard while the button is kept pressed.
- Push the crown back to the normal position.

HOW TO STOP THE ALARM

- At the designated time the Alarm rings for 20 seconds, and it is automatically disengaged as it stops.
- To stop it manually while the Alarm is ringing, press any button. It will only stop the Alarm, and no World Time operation can be made.

HOW TO CANCEL THE ALARM

- Pull the crown out to the **1st** click position.
- Press and hold the button **B** until the Alarm hands stop and indicate the current time.
- Push the crown back to the normal position.

HOW TO USE THE WORLD TIME FUNCTION

- Before using the World Time function, ensure that the positions of the city hand and the local time hour and minute hands are adjusted.
- World Timer indicates time in any time zone at the Local Time sub-dial (at 12 H position) in the 24-hour format.
 - The Local Time sub-dial shows time in the city pointed by city hand at the inner ring.
 - In order to select city whose time you wish to know, press the button **A** or **B** and move City hand to that city on the inner ring.
Note: When the city to which the City hand points on the inner ring is observing daylight saving time, select the city that is adjacent clockwise to compensate for the one-hour time difference.

BATTERY LIFE INDICATOR

- The movement has SR927W battery.
 - Battery life – approximately 3 years.
 - When the battery nears its end, the small second hand moves at two-second intervals instead of the normal one-second intervals. When this happens, have the battery replaced with a new one as soon as possible.
- In this case, the alarm will not ring even if it is engaged. The watch remains accurate even if the small second hand is moving at two-second intervals.